# us15**Series**



# USER MANUAL



### CONTENT

1	USER MANAGEMENT	5
	1.1 New User	6
	1.2 All Users	13
	1.3 Single Line	14
2	USER ROLE	15
3	COMMUNICATION	17
	3.1 Ethernet	18
	3.2 Serial Communication	18
	3.3 PC Connection	19
	3.4 Wireless Network	20
	3.5 Cloud Server Settings	21
	3.6 Wiegand Setup	23
4	SYSTEM	25
	4.1 Date Time	26
	4.2 Attendance	26
	4.3 Fingerprint	29
	4.4 Reset	31
	4.5 USB Upgrade	31
5	PERSONALIZE	32
	5.1 User Interface	33
	5.2 Voice	36
	5.3 Bell Schedules	37
	5.4 Punch State Options	41
	5.5 Shortcut Key Mapping	42
	5.6 Manual Add Log	47

#### CONTENT

6	DATA MANAGEMENT	49
	6.1 Delete Data	. 50
	6.2 Backup Data	. 51
	6.3 Restore Data	. 52
7	ACCESS CONTROL	54
	7.1 Time Schedule	. 55
	7.2 Access Group	. 55
8	USB MANAGER	59
	8.1 Download	60
	8.2 Upload	61
	8.3 Download Options	61
9	ATTENDANCE SEARCH	63
10	SHORT MESSAGE	66
	10.1 New Message	67
	10.2 Public Messages	69
	10.3 Personal messages	69
	10.4 Draft Messages	69
	10.5 Message Options	. 70
11	WORK CODE	71
	11.1 New Work Code	72
	11.2 ALL WORK CODES	. 73
	11.3 SET WORK CODE	. 73

#### CONTENT


12	JOB CODE	75
	12.1 New Job Code	. 76
	12.2 All Job Codes	. 77
	12.2 All Job Codes	. 80
	12.3 Job Code Options	. 83
	12.4 Job Group Option Menu Operation	85
13	TIP CODE	88
	13.1 Tip code settings	. 89
	13.2 Tip code	90
14	AUTOTEST	94
	14.1 All Test	. 95
	14.2 Test LCD	. 95
	14.3 Test Voice	. 97
	14.4 Test Keyboard	. 97
	14.5 Test Fingerprint Sensor	. 97
	14.6 Test Clock RTC	97
15	SYSTEM INFORMATION	98
	15.1 Device Capacity	. 99
	15.2 Device Info	. 99
	15 3 Firmware Info	100







Go to menu and select User Management.

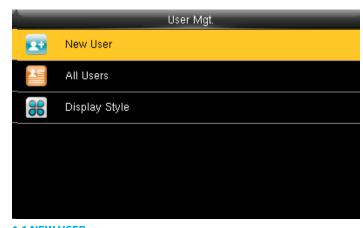

1.1 NEW USER

Select New User.




Select **User ID** and press **OK**.



Enter the User ID by using the keypad and press OK.




Select **User Role** and press **OK** 

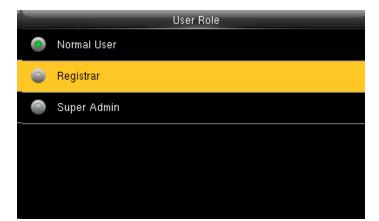


Click on Registrar and press OK.



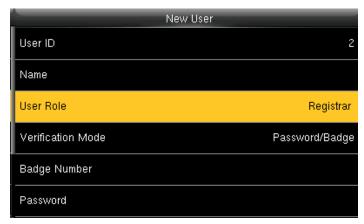


A user with "Registrar" is able to "Add", "Delete" and "Edit" standard users to the device.

He is also able to view "Standard Attendance Data" for existing users on the clock.

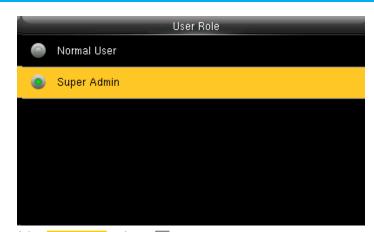


Select Super Admin and press OK.

The super administratiotor has rights to all the menu functions.

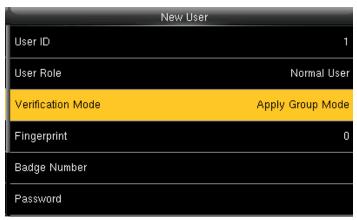

Select Verification Mode and press OK.

Verification mode is basically used to verify the user.

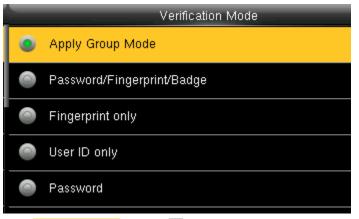

Select Apply Group Mode and press OK. By pressing the apply group mode the user can verify himself with all the options that are available in verification mode.



By clicking the option above the user can verify himself either with his/her Fingerprint/Password or Badge.




Select Apply Group Mode and press OK.






When you select the option from above the user needs all three things to verify himself or it won't verify.

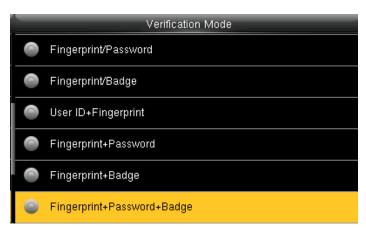

When you select the option above the user needs his/her fingerprint and either badge or user id to verify himself.

When there is "/"sign it means you can use either option to verify.

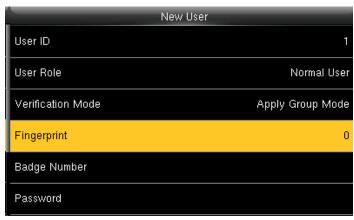


To enroll the fingerprint for the new user select fingerprint and select OK.



Place your finger on the fingerprint sensor properly.




Place the same finger on the fingerprint sensor for the second time.

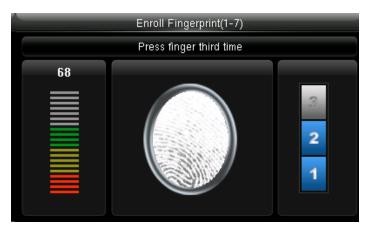


After that, you can again place the same finger on the fingerprint sensor.



Enrollment succeeds. If the enrollment fails, the system will display a prompt message and return to the [Enroll Fingerprint] interface. In this case, you need to repeat the operations of step 2

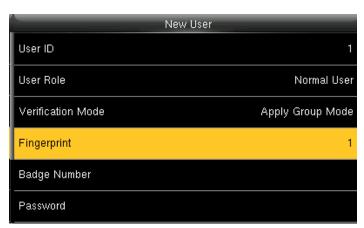


After the fingerprint is enrolled successfully the fingerprint will be shown as 1 as above which means one fingerprint is enrolled.

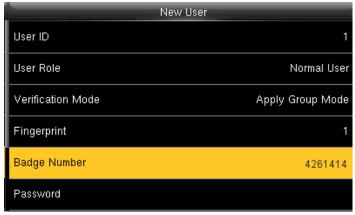

Select Badge Number and press OK.




When you select the badge number it will tell you to swipe the badge/rfid card to enroll.

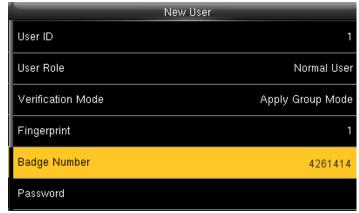

When you swipe the badge number the badge number will be displayed as above

Here I swiped badge number 4261414 and that number is enrolled for that user.

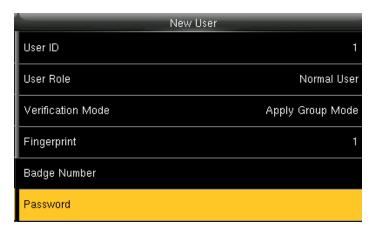


Select **Password** and press **OK**.






Here you can input the password by using the keypad to enroll.

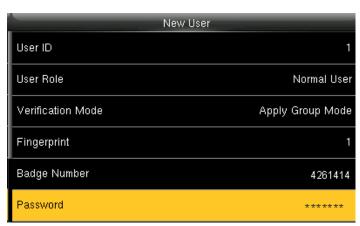

Once you have entered the password, the above image will be displayed for that user with his/her fingerprint, the badge number, and password that needs to be entered.

Lockout Override

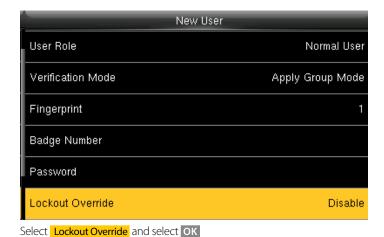

... Select lockout override as **Disable**.

Disable

Enable



A user punches in off the activate schedules, the device will notify the user by "Error! Invalid time period Failed to verify."



Select lockout override as **Enable**.






When you enable this function the above image will be displayed.



A user punches in off the activate schedules, the device will notify the user by "Successfully Verified." as shown above.

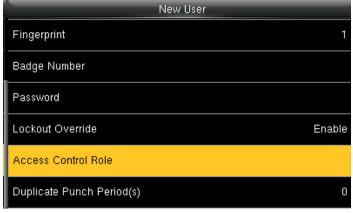


Select Access Control Role and press OK.



Select Access Group and press OK.



You can change the number for that group in the input section above using the keypad.

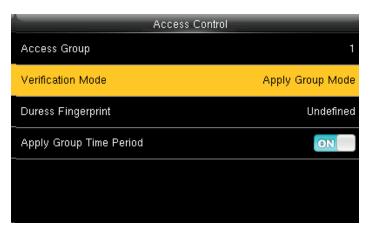


Select verification mode and press OK







In verification mode, you can select apply group mode which will select all the methods of verification as shown above.

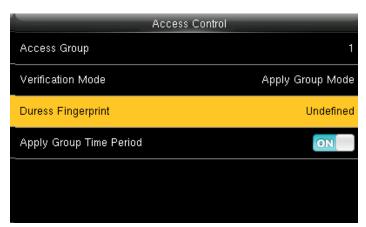

Select duress fingerprint and press OK.

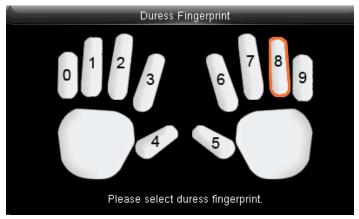


Press **♦**| **▶** to select enrolled fingerprint and press **OK**.

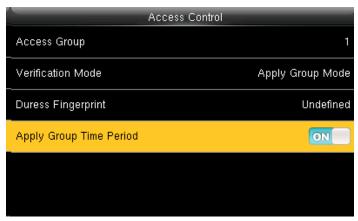

Press  $\checkmark$  to select Apply Group Time Period, press OK to select whether the user uses his/her group's default time zone.



When  $\ensuremath{\mathsf{OFF}}$  is selected, Press  $\ensuremath{\blacktriangledown}$  to select Time period 1.

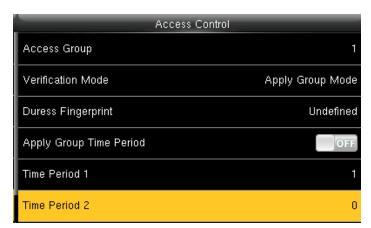


Similarly, you can choose time period 2 and press OK.






Select duplicate punch period and press OK.

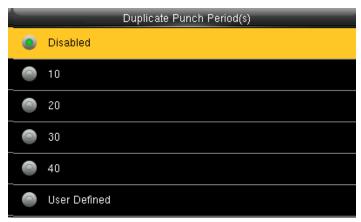

Here you can **Disabled** or select the punch period you want.

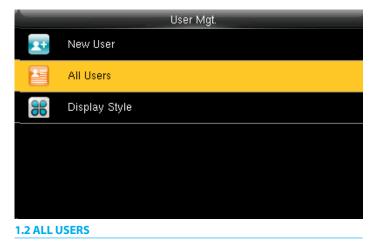

Select All users and press OK.




Press to select "All User and press" OK.



Press OK to enter User Info interface. Here you can Edit the user information.



The User ID cannot be modified, and the other operations are similar to those performed to add a user.

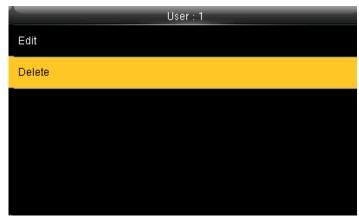

If you want to delete the user select **Delete** as shown above and press **OK** and the user will get deleted.




.5 SINGLE LINE



Single Line



Multiple line

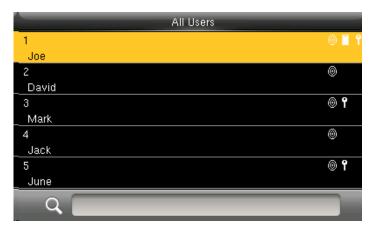

Mixed Line



USER ROLE



#### **USER ROLE**




Select User Role and press OK.



Click on Registrar and press OK

You are also able to view "Standard Attendance Data" for existing users on the clock

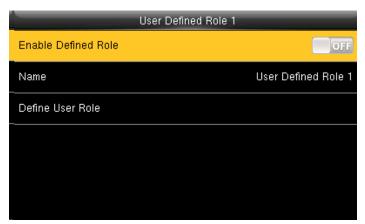

Here you can **Enable the defined Role** for user by turning it ON.



Select Define User Role and press OK.



Press ightharpoonup and ightharpoonup to select the rights. Press ESC to exit.


3

# COMMUNICATION






Go to menu and select "COMM" and press OK

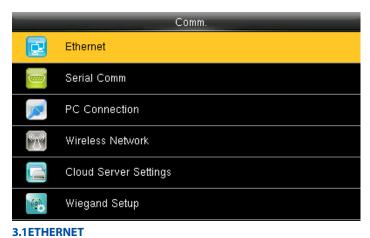


-----

Select **Ethernet** and press **OK** 

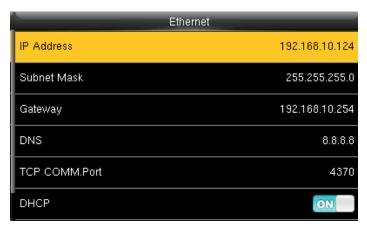

**IP Address:** IP is 192.168.1.201 by default. You can modify it if it is necessary. But it cannot be the same with that of PC.

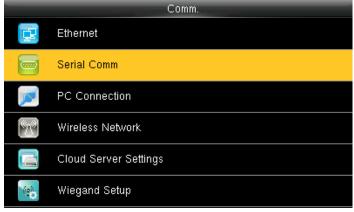


#### **3.2 SERIAL COMMUNICATION**

Select Serial Comm and press OK.

	Serial Comm
Serial port	RS232(PC)
Baudrate	115200

Select "Serial Port" and press OK.

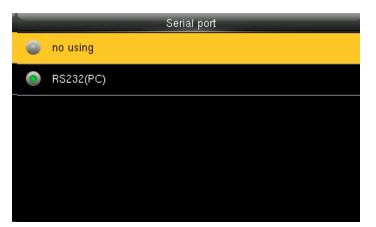

RS232: Whether to use RS232 to communicate or not. Select **YES** if RS232 is to be used.






Select Serial Port as no using if you do not want to use the port.



Baudrate: Used for communication with PC.




There are five options: 9600, 19200, 38400, 57600 and 115200. If the communication speed is high, RS232 is recommended. If the communication speed is low, RS 485 is recommended

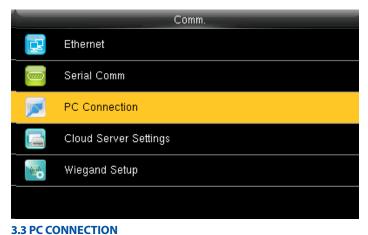

Select PC connection and press OK.




Select Comm Key and press OK

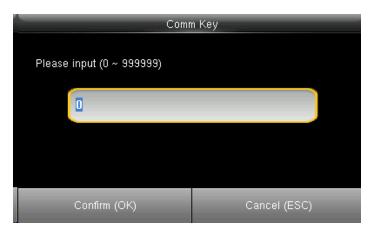

Enter a password in the input box using the keypad as shown above and to select confirm OK and press OK.




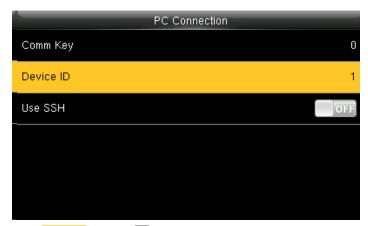

Select Device ID and press OK.



Here you can input the number for this device by using the keypad and hit press confirm OK.

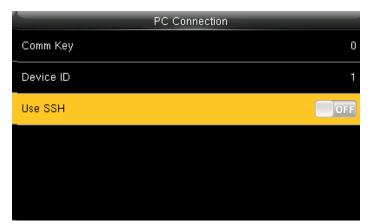


Here the Use SSH is OFF



When you turn **ON** the "SSH" function the device will restart automatically as shown above.


When this function is enabled you cannot "Telnet" into the clock as it will disable that function.

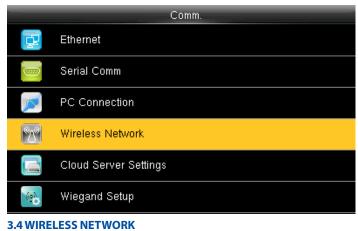


Click on Wireless Network and press OK



When you select the wireless network option the following window will appear in which as a default WIFL would be OFF.

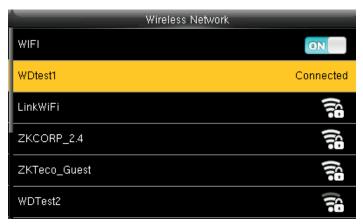

You can turn **ON** the wireless network and the networks available in the range would be displayed as above.

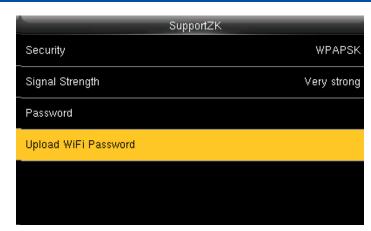


You can select any wireless network you wish to connect and you can upload the password via "USB" or by using the keypad on the clock.

Once you upload the password the following network will get connected.


#### See NOTE below



Once the password is uploaded succesfully the above image will be dispalyed as "Upload is done"  $\label{eq:control}$ 

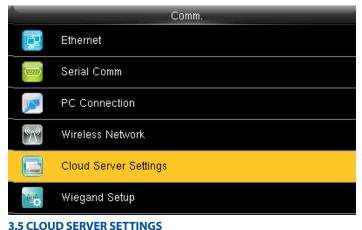

Click on "Cloud Server Settings" and press OK

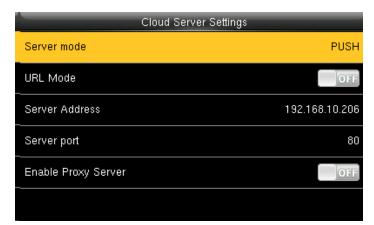

Select **Server mode** as "PUSH" as shown above.

Cloud Server Settings

Server mode PUSH

URL Mode OFF

Server Address 192.168.10.206

Server port 80

Enable Proxy Server

Here the URL Mode is OFF.


It rafare to volur nuch carvar addrace

**NOTE:** The new filename for uploading Wi-Fi password or URL Webserver: updataoptions2.cfg


Inside this file you can either use: WirelessKey= [for uploading Wi-Fi password] or ICLOCKSVRURL= [for uploading webserver URL]

The clock won't accept saving those two configurations under the same filename. Our suggestion would be to save one separate file for Wi-Fi and one for URL.




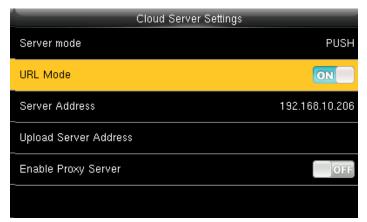


You can turn the "URL" mode ON by pressing the W— button on the clock.

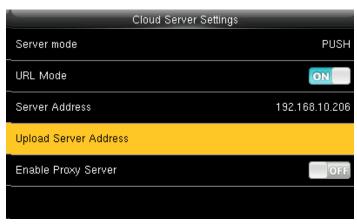


Once the "URL Mode" is **ON** you can upload the server address with "USB". **See NOTE below** 

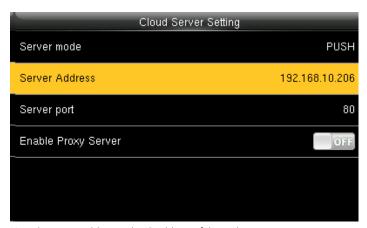


Here the server address is the IP address of the webserver.

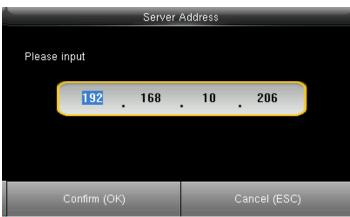

Here you can change server port of the webserver by using the keypad and pressing confirm ok.

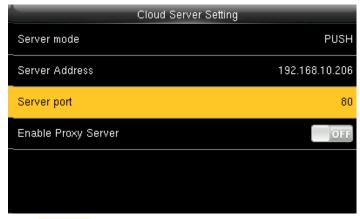

Select Server port. It is as port which is used by the webserver.

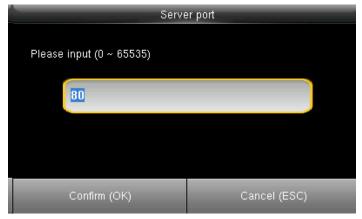


Here you can change server port of the webserver by using the keypad and pressing confirm OK.


**NOTE:** The new filename for uploading Wi-Fi password or URL Webserver: updataoptions2.cfg

Inside this file you can either use: WirelessKey= [for uploading Wi-Fi password] or ICLOCKSVRURL= [for uploading webserver URL]


The clock won't accept saving those two configurations under the same filename. Our suggestion would be to save one separate file for Wi-Fi and one for URL.

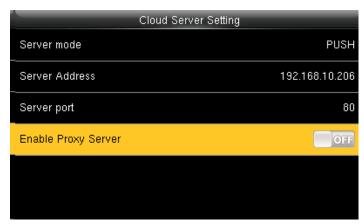

Here you can select the proxy server to be **Enabled** or not. If it is off as above the proxy server will be disabled.

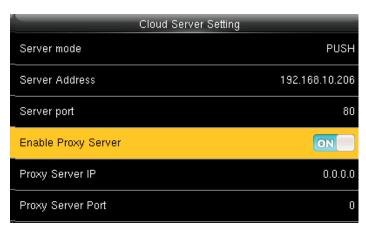


When you enable the proxy function, set the IP address and port number of the proxy server. This option indicates whether or not to use a proxy IP address. You may choose to enter the proxy IP address or the server address for Internet access, whichever you like.

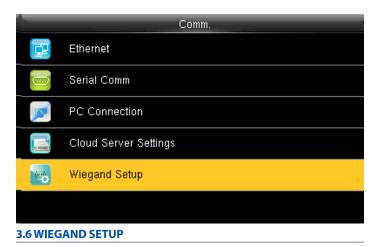


Click on Wiegand Setup and press OK




Click on Card format detect automatically and press "OK".s (This function is available only for standard RFID and HID proximity Cards)

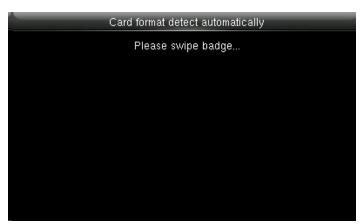

Here you can swipe the multiple types of cards with different Wiegand formats.

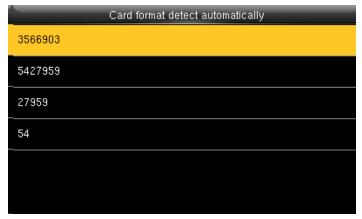


After you swipe multiple cards all the cards with different Wiegand formats will be displayed as above.

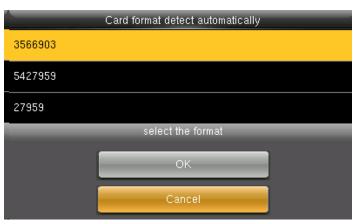

Here you can select the Wiegand format of the card you wish to choose to register.

If you select **Cancel** that Wiegand format would not be selected.

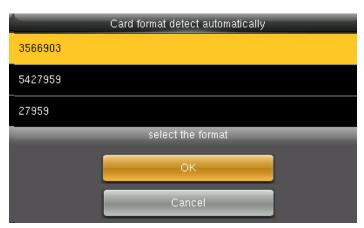


To select the particular Wiegand card format select that format and press **OK** as shown above.







Select "System" and press OK

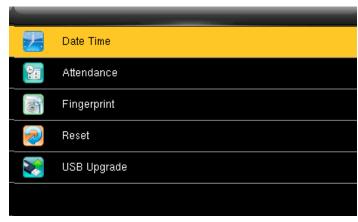


**4.1 DATE TIME** 

Select **Date Time** and press **OK**.




Press | and OK to select items. When the setting is completed, press OK to save the setting and exit.

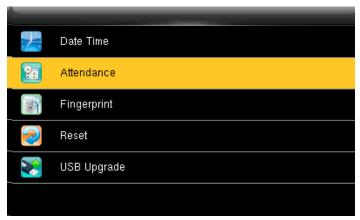


#### **4.2 ATTENDANCE**

Select Attendance and press OK.

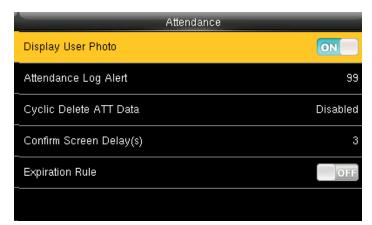


If you want to display the user photo you can select ON

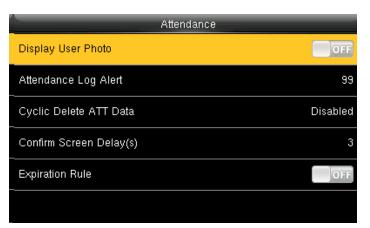


If you don't want the user photo to be displayed select OFF as above.




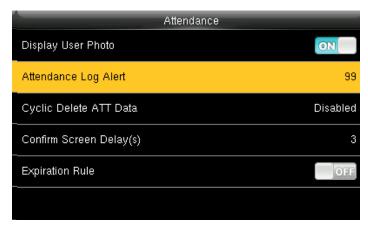


When the available space is insufficient to store the specified number of attendance records, the FFR terminal will automatically generate an alarm. (Value scope: 1-99)

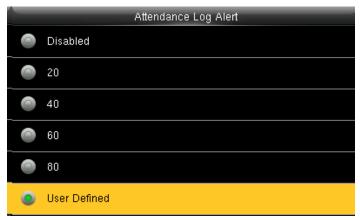


You can change the value for attendance log alert from the image above.

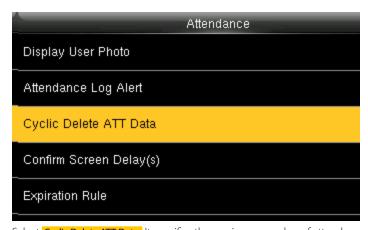


Select Cyclic Delete ATT Data. It specifies the maximum number of attendance records that can be deleted at a time when the number of attendance records reaches the upper limit.

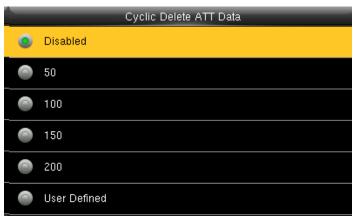

This function can be disabled; otherwise, the value ranges from 1 to 999

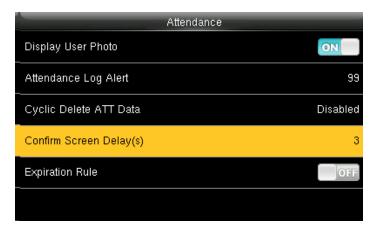


The screen delay specifies the time for displaying the authentication result.

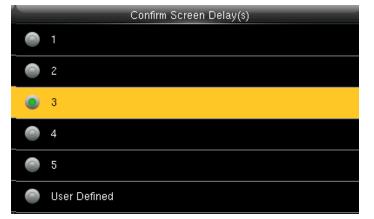


The value ranges from 1s to 9s.




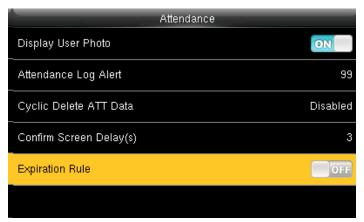

You can select the expiration rule as OFF if you don't want to retain the user information or to save attendance records.

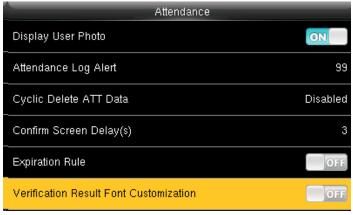


Click on the Verification Result Font Customization option from above and press ON to change the Font Size.

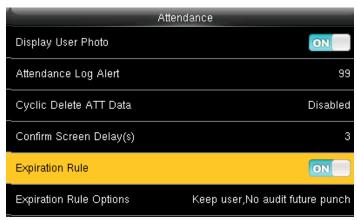


You can select one of the three conditions:


- Retaining user information and not saving attendance records;
- Retaining user information and saving attendance records;
- Deleting user information

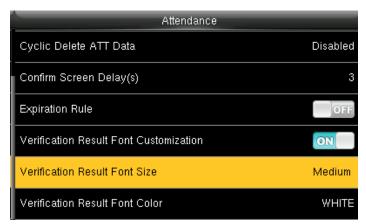

Here the default the font size would we be set to "Medium".

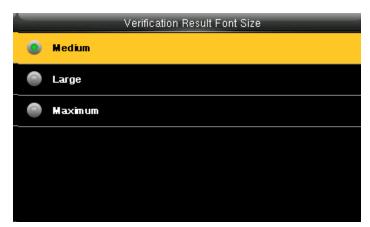


Here you can change the Font size from  ${\color{red}{\sf Medium}}$  to  ${\color{red}{\sf Large}}$  or  ${\color{red}{\sf Maximum}}$  .

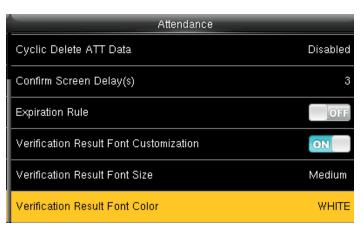

Select Verification Result Font Color from above and press OK




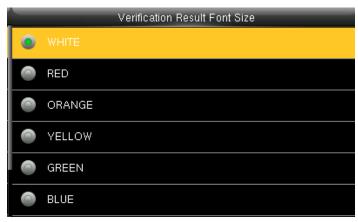

Here you can change the color of the font to a different color you wish to apply.



Select Fingerprint option and click OK.

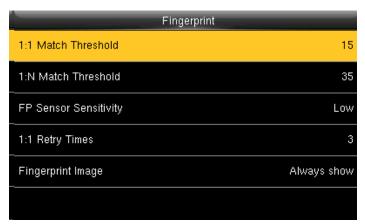

Here select 1:1 Match Threshold . Thevalue is similar to the ID+fingerprint verification and the enrolled template.



You can change the value from the image above. The default will be selected as 15.


Fingerprint	
1:1 Match Threshold	15
1:N Match Threshold	35
FP Sensor Sensitivity	Low
1:1 Retry Times	3
Fingerprint Image	Always show

Here select 1:N Match Threshold. The value is the similar to verification and the enrolled template.



You can change the value from the image above. The default will be set to 35




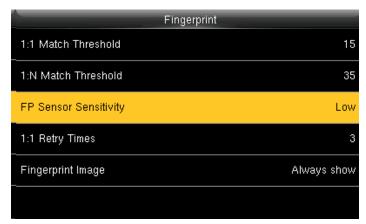


Select FP sensor Sensitivity and press OK. It is used to set the sensitivity of fingerprint collection.



The default value Medium is recommended. You can set the sensitivity of fingerprint collection to High when the response to finger scan lags in a dry environment. When the usage environment is humid, you can set the sensitivity of fingerprint collection to Low if the fingerprint is difficult to identify.

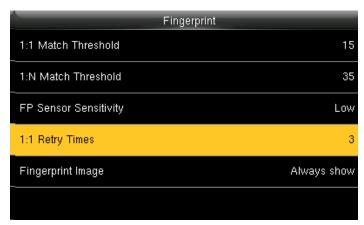

This parameter is used to set the retry times in the event of failure of 1:1 verification or password verification due to an absence of fingerprint enrollment or improper finger placement, so as to avoid repetitive operations.

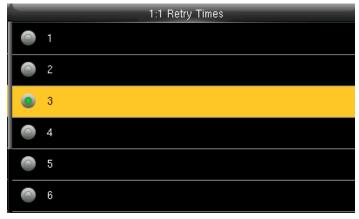

You can change the retry times from the image above. The value ranges from 1 to 6.


Fingerprint	
1:1 Match Threshold	15
1:N Match Threshold	35
FP Sensor Sensitivity	Low
1:1 Retry Times	3
Fingerprint Image	Always show

Here you can select the **Fingerprint Image** to be shown. If you select this option the display of the fingerprint image on the screen will be shown.



Here you can change the fingerprint image to be shown while enrolling or to match and never



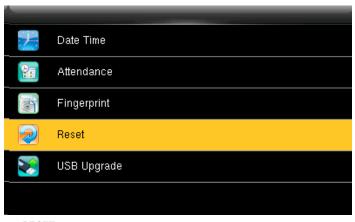


**4.4 RESET** 

Select Reset.



When you select **Cancel** it will go back to the previous menu. If you select **OK** it will reset the setting and restart the clock.

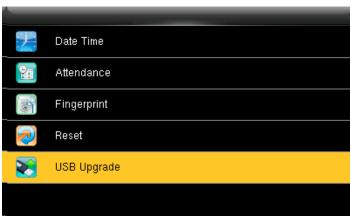

**4.5 USB UPGRADE** 

Select **USB Upgrade**.



If the USB is not readable or properly inserted the image above will be displayed and you will not be able to upgrade.




If the USB is readable or properly inserted the image above will be displayed and you will be able to upgrade.








Select Personalize and press OK.

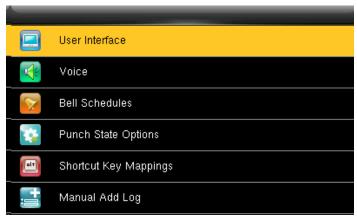


**5.1 USER INTERFACE** 


Select User Interface and press OK

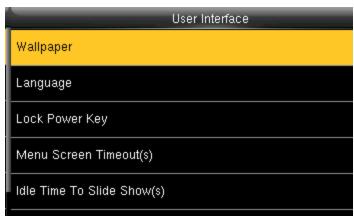


Select Wallpaper and press OK.

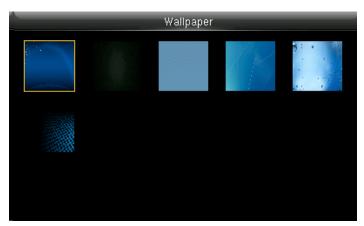

If you select the wallpaper, the different wallpapers will be displayed as shown above and you can select from any of the wallpaper you want to be displayed.

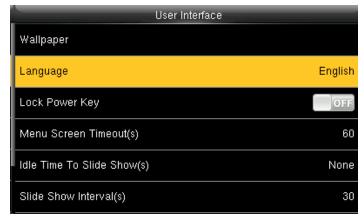


Select Language and press OK

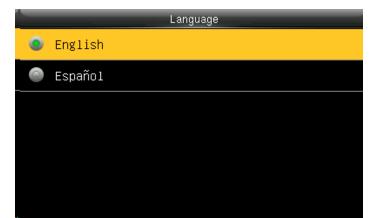


Here you can select the language you wish to display on the clock. The options are English and Espanol (Spanish).



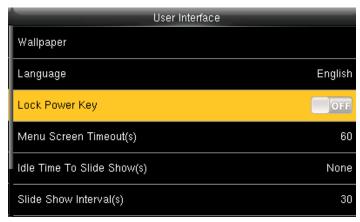


To prevent hostile power-off, select whether to lock power-off or not. "disable": the power is off 3 seconds after pressing power-off.

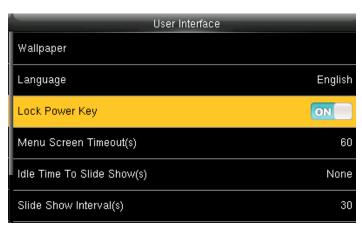


"Enable": it is ineffective after pressing power-off



The device will display the main interface automatically when no operation is performed on a menu within the menu timeout time  $\frac{1}{2} \int_{\mathbb{R}^{n}} \frac{1}{2} \left( \frac{1}{2} \int_{\mathbb{R}^{n}} \frac{1}{2}$ 

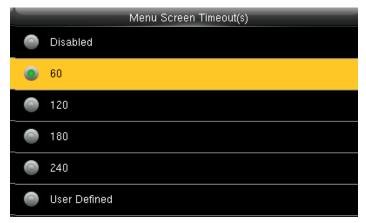

This function can be disabled; otherwise, the value ranges from 60s to 99999s.

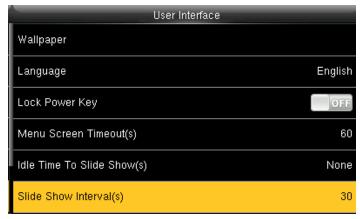


The advertisement picture is displayed when no operation is performed on the main interface within the waiting time.



This function can be disabled; otherwise, the value ranges from 15s to 999s




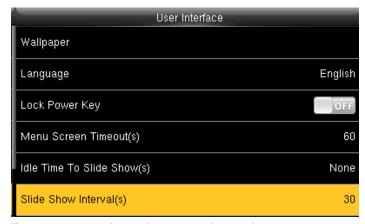

This parameter is used to set the picture cycle interval



This parameter can be either disabled or ranges from 30 s to 999s.

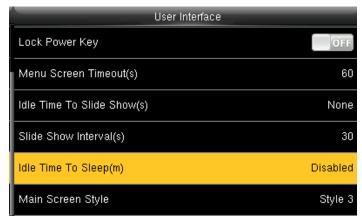

This parameter is used to set the picture cycle interval



This parameter can be either disabled or ranges from 30 s to 999s.



This parameter is used to specify a period after which the device is put in sleep mode if no operation is performed within this period. You can wake up the device from sleep by pressing any key or touching the screen.



Numerical range in 30 minutes, the factory default for 30 minutes.



This is to set where and how the clock and status key are displayed on the main screen.




Here is the "Style 1". If you want this style press **Set** and **OK**. And if you don't want this style simply press back.




Here is the "Style 2". If you want this style press  $\underline{\textbf{Set}}$  and  $\underline{\textbf{OK}}$ . And if you don't want this style simply to press back.



Here is the "Style 3". If you want this style press **Set** and **OK**. And if you don't want this style simply press back

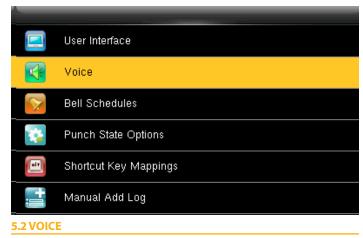

Select Voice and press OK.

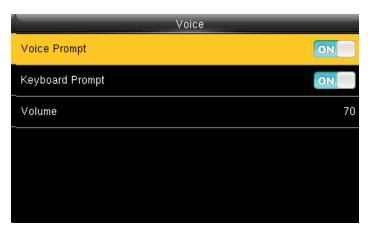


**Voice prompt:** This parameter is used to set whether to play voice prompts during the operation of the FFR terminal. Select **ON** to enable the voice prompt, and select **OFF** to mute.






**Keyboard prompt:** This parameter is used to set whether to generate beep sound in response to every keyboard touch. Select ON to enable the beep sound, and select OFF to mute

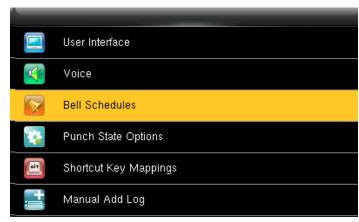

**5.3 BELL SCHEDULES** 

Select "Bell Schedules" and press OK.

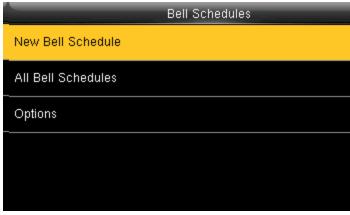

Click on New bell schedule.



Click on bell status. It is whether you want the bell to enable. If you turn **OFF** it will disable the bell.



If you turn **ON** it will enable the bell.



The bell rings automatically when it is the specified time.





You can change the timings for the bell to ring using the keypad and then press confirm <code>OK</code>.


Here the bell is scheduled at 12.24PM.



The Repeat function specifies whether to repeat the ringtone



You can select any day of the week to repeat the ringtone. If you don't want the ringtone to be repeated set to never.

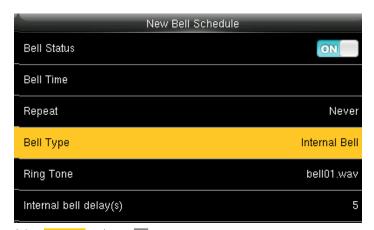

Select Bell Type and press OK.



Here you can select the bell type. If you want the ringtone to be played internally then select internal bell, for external select external bell and for both select internal and external bell.




Select Ringtone and press OK.





You can select any ringtone you want from the above options and press OK.

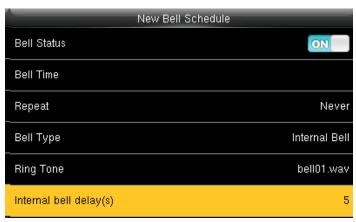


Select Internal bell delay (s) and press OK.


It specifies the duration for ringtone playing



You can edit the delay of the internal bell from the image above. It ranges from 5 to 99 seconds.

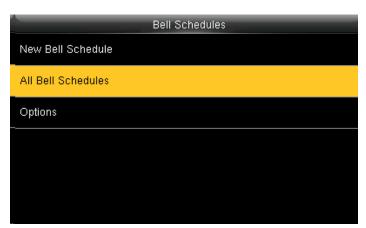

Select All bell schedules and press OK.

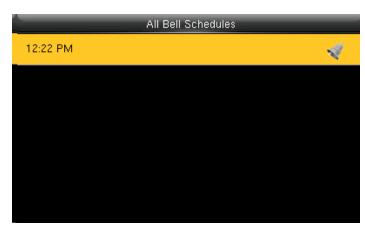


Select New Bell Schedule and press OK



Select Edit and press OK



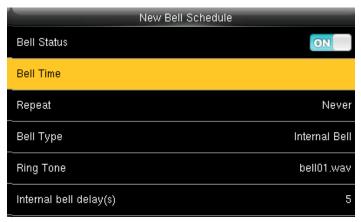


Select Item you wish to edit.





Press ▼ to select YES or NO.

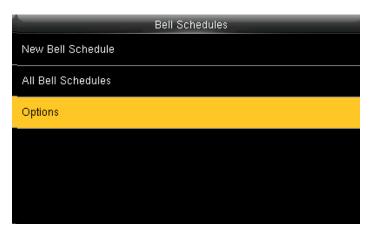





Select External Bell Relay.






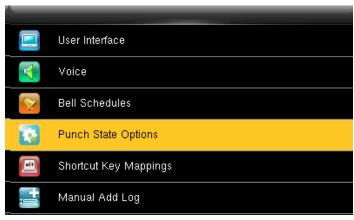

**5.4 PUNCH STATE OPTIONS** 

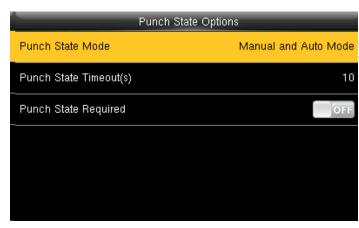

Press  $\checkmark | \triangle$  and OK to select items. When the setting is completed, press OK to save the setting and exit.

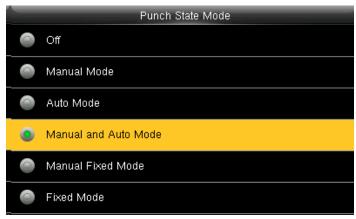

The main interface displays the status keys that can be switched automatically, and you are also allowed to switch status keys manually. A status key you select manually will be switched according to the automatic switching plan after it disappears upon a timeout.



Punch state timeout specifies the timeout period of the status key displayed on the main interface.




You can change the punch state timeout from the image above. The timeout ranges from 5 to 99 sec.



specifies whether the status of work attendance check must be selected during authentication.

Here when its off it won't be selected.

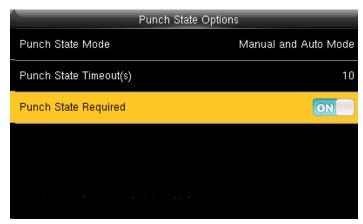

Specifies whether the status of work attendance check must be selected during authentication.

When it's on it will be selected.



\_\_\_\_\_



Select the keys and assign the group to that key.




Pressing switch will enable and disable each individual "Job Group".



Select F1 key as Check in.




Select Punch State Value and press OK.

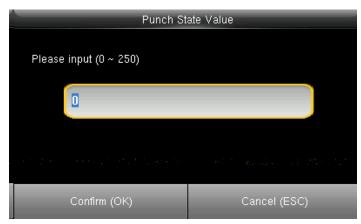

Here you can change the punch state value in the input screen by using the keypad. The value ranges from  $0\sim250$ .

F1	
Punch State Value	0
Function	Punch State Options
Name	Check-In
Set Switch Time	
Select Job Group	Disable
Select Tip Group	Disable

Here select punch state options as Function

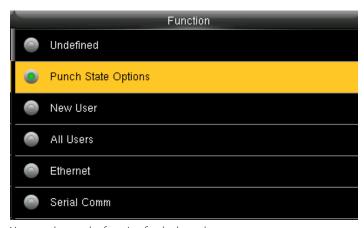

You can change the function for the keys above.



Select name for F1




Choose the key you want for F1.



Select Set Switch Time and press OK.



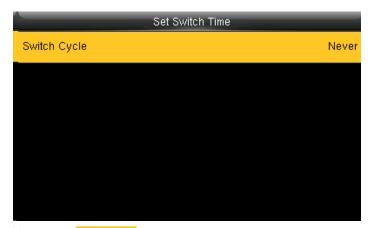

Here you can Switch Cycle

	F1
Punch State Value	0
Function	Punch State Options
Name	Check-In
Set Switch Time	
Select Job Group	Disable
Select Tip Group	Disable
Selection group, and press OK If you	udisable the job group will be disabled

Select job group and press OK. If you disable, the job group will be disabled and it will not show on the screen




You can select any job group you want and you can name the job group by using the keypad.



If you "Disable" the tip group the tip group will not be displayed on the screen.



To enable the tip group you can select the tip group you wish to enter in that group.

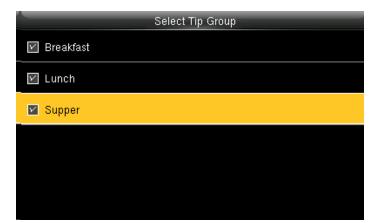

Here all the tip groups have been selected as above.



	Shortcut Key Mappings	
ESC Key		Undefined
Up Key		Undefined
Down Key		Undefined
Right Key		Undefined
F1		Check-In
F2		Check-Out

Select F2 as Check Out.

	F2
Punch State Value	1
Function	Punch State Options
Name	Check-Out
Set Switch Time	
Select Job Group	Disable
Select Tip Group	Disable

Select Punch State Value.




Here the punch state value is set to 251 For more details refer to paragraph 13.



You can change the value of the punch state by changing the value in the input screen with the help of keypad.




Select F3 as Tip code. For more details refer to No 13.

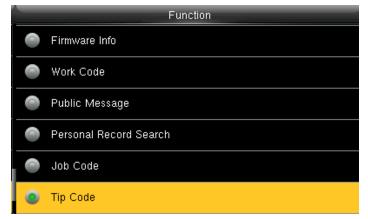


You can change the function for that key from the image above.



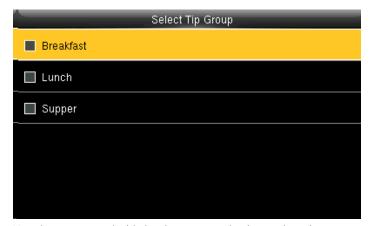

Here the tip group is disabled and no tip group has been selected.

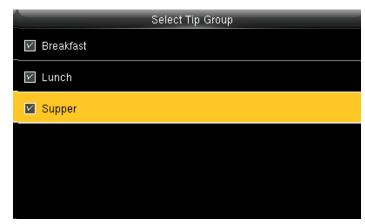


You can select the tip group you want. Here all the tip groups are selected



When you select all the tip groups the select tip group will display as "All group".



For More Details please refer to NO.12

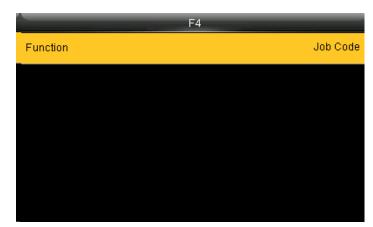


Select the **Function** self-service for F4 and the F4 key will display as Job Code on the main screen.



You can change the functions from above.




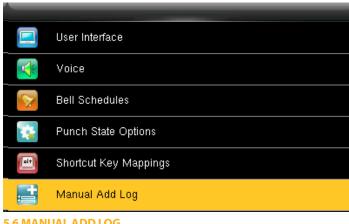

**5.6 MANUAL ADD LOG** 




Click on User ID

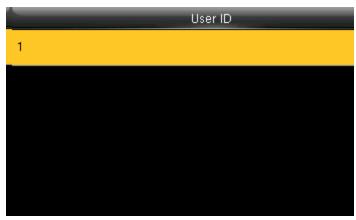


The user id is displaying as 1.

Select manual add log and press OK.

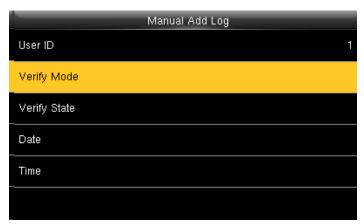

Click on Verify mode.

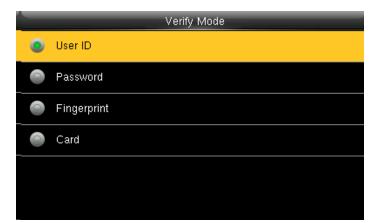


Here you can select any verification mode you want the user to get verified. The user can verify themselves either with their UserlD, Fingerprint, Password or Card/Badge.



Select verify state as none. In this all the users from all states can verify


If you verify the state, the user from that state only can verify themselves.

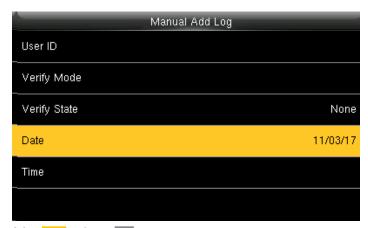


Select Date and press OK.



You can set the date by using the keypad. Here the date is set to 11/03/2017.

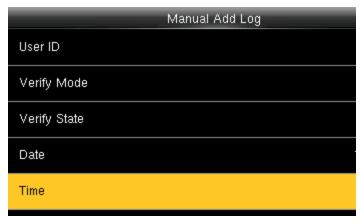

Select Time and press OK.

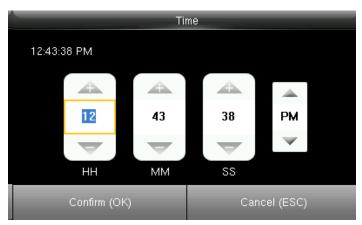


You can set the "Time" by using the keypad. Here the time is set to 12hr, 43min, 38ss.








Select Data Manager and press OK

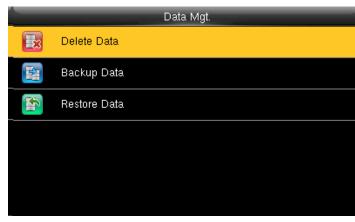


**6.1 DELETE DATA** 


Select Delete Data and press OK.

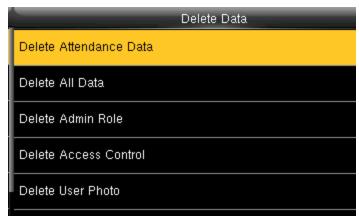


It will delete the attendance records

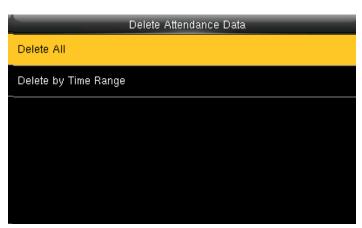

When selecting Delete All it will delete all the attendance records

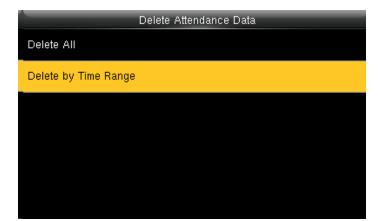

You can delete the attendance data by Time Range too.

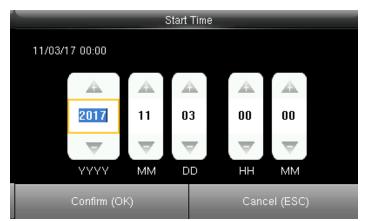


To selete by time range you can select the time you want the data to be

It will delete the data for that specific time you selected.






Here you can delete all data by selecting delete all data and press OK. CANCEL will take you back to previous screen.

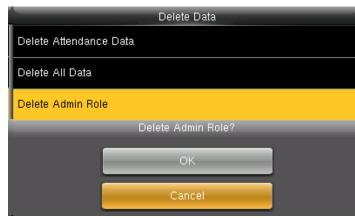


Here you can delete admin role by selecting delete admin role and press OK.


CANCEL will take you back to previous screen

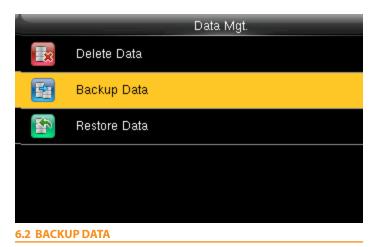




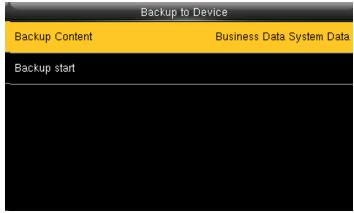

Press ightharpoonup and ightharpoonup to select the local configuration items to be backed up to device.

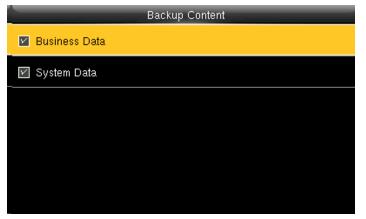

You can select the content you want to backup.

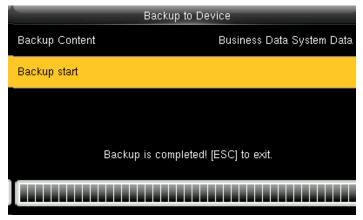



**Backup to USB Disk**, the operations are similar to those performed to Backup to Device.




If the usb is not properly inserted the above screen will be displayed. You can either change the USB or insert it properly again.







Select the local configuration items to be restored and save the selected items.

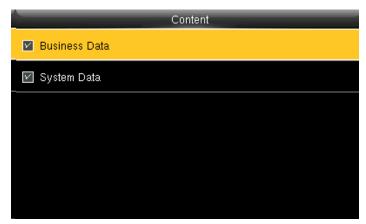

You can select the content you want to restore.



select Start Restore and press OK.
select Yes or NO Device and press OK.



Restore from USB Disk the operations are similar to those performed to restore from Device.




If the usb is not properly inserted the above screen will be displayed. You can either change the USB or insert it properly again.







Select Access Control and press OK.

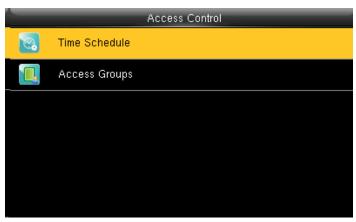


7.1 TIME SCHEDULE

Select "Time Schedule" and press OK.




Use numeric keys to search for a time period in the range from 1 to 50. Press 


▼ to select the item to be set and press OK

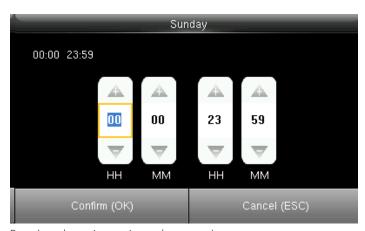

Press / to select a time option and press  $\checkmark$  /  $\blacktriangle$  to set time. After setting a period of time, press  $\boxed{\text{OK}}$  to save the setting and exit

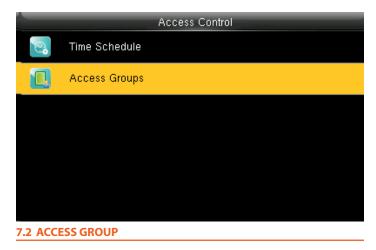

Select Access Groups and press OK.

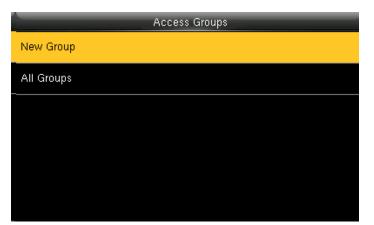

Press OK to add New Group






Press OK.



Enter the No. using the keypad and press OK.



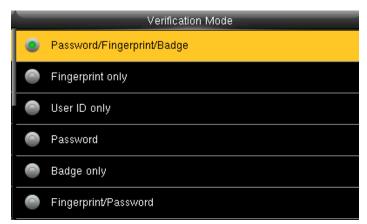

Select Verification Mode, press ok to save and return.




select Time Period 1 and press OK



Enter the No. using the keypad and press OK



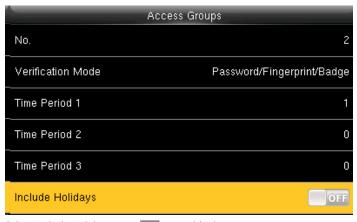

Select Include Holidays, press OK to enable the item



Select All Groups and press OK



Select one of All Groups and press OK



Select Edit and press OK




The No. cannot be modified, and the other operations are similar to those performed to add a New Groups Press "ESC" to return



select Delete and press OK



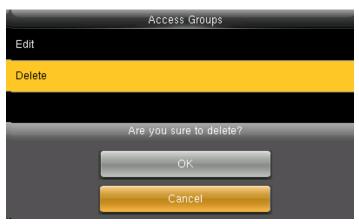


If you select <code>OK</code> it will delete all the access groups and when you select <code>Cancel</code> it will take you to the previous screen without deleting any access groups.






Go to Menu and select USB Manager and press OK.

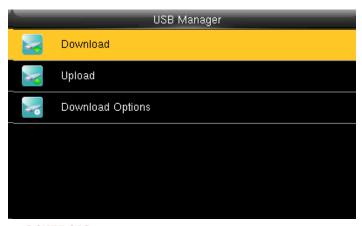


**8.1 DOWNLOAD** 

Select **Download** and press **OK**.

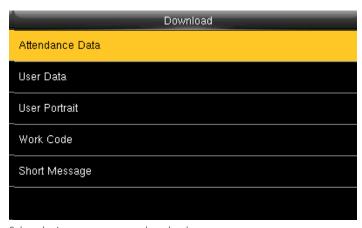

Select the items you want to download.


Here when we select the Attendance Data it will import all the attendance data from the FFR terminal to USB disk

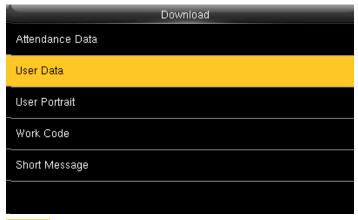


User data will import all the user information, fingerprints and facial images from the FFR terminal to a USB disk

Download	
Attendance Data	
User Data	
User Portrait	
Work Code	
Short Message	


**User Portrait** will Import the employees' photos from the terminal to a USB disk.

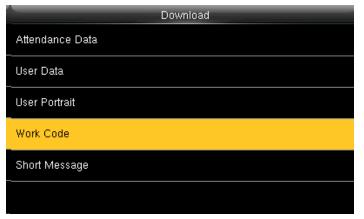

Work code will save the work IDs on the device to a USB drive

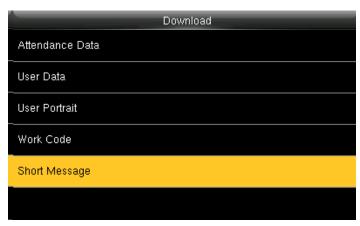

The short message will be displayed by the administrator and will be imported from terminal to USB disk.

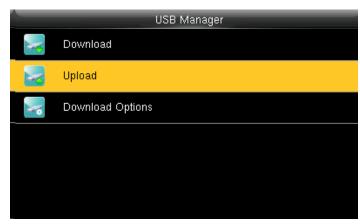


#### **8.2 UPLOAD**

Select **Upload** and press **OK**.

In Upload it will upload all the data from USB disk to terminal.




Screen saver will Upload the JPG documents with "ad\_" as initial letters of document names stored in a USB disk to the terminal. After the upload, these pictures can be displayed on the initial interface of the terminal.

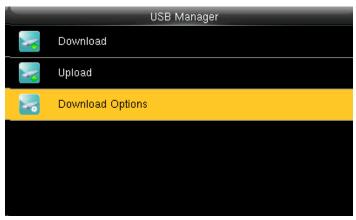


#### **8.3 DOWNLOAD OPTIONS**

Select **Download Options** and press **OK**.


#### See page 62 for detailed instructions

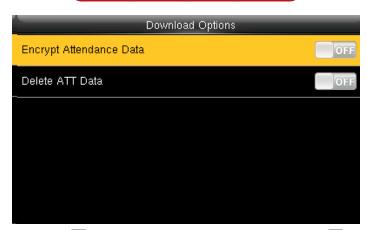


Press ightharpoonup and ightharpoonup to select items. When the setting is completed, press ightharpoonup to save the setting and exit.

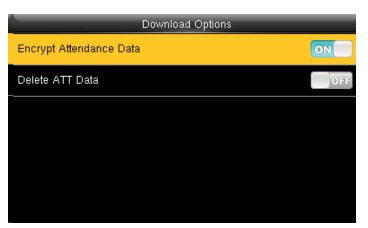

This will download all the encrypted attendance data of the employee.

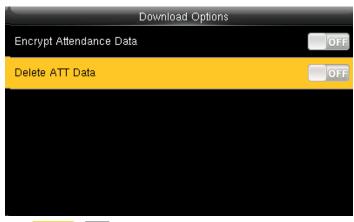



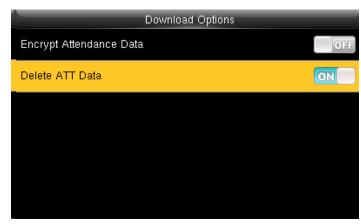

If the ATT data is ON it will download the data as the function is enabled.



Instructions for Uploading Wallpapers and Screensavers Via USB Pen Drive

PREREQUISITES: Supported File Extensions: bmp, jpg, png

Image File Size: No larger than 200 KB Resolution Sizes: 400 x240 pixel

#### Wallpaper:

- 1. Created a folder in the root of the USB drive labeled wallpaper
- 2. Place the desired wallpapers inside this folder. Make sure to follow the supported file types and sizes.
- **3.** The filename for each image should be followed as the image below:

Name	Size	Туре
wallpaper9.jpg	38 KB	JPG File
wallpaper10.jpg	43 KB	JPG File
wallpaper11.jpg	12 KB	JPG File
wallpaper12.jpg	80 KB	JPG File
wallpaper13.jpg	43 KB	JPG File

Make sure to start from **wallpaper9.jpg** to avoid overwriting existing wallpaper images

- 4. Insert USB drive to device and navigate to USB Manager>Upload>Wall-
- **5.** Select the images you wish to upload or upload all the pictures at once.

#### Screen Saver:

- 1. Created a folder in the root of the USB drive labeled advertise
- 2. Place the desired screen savers inside this folder. Make sure to follow the supported file types and sizes.
- **3.** The filename for each image should be followed as the image below:

Name	Size	Туре
ad_pic9.jpg	38 KB	JPG File
ad_pic10.jpg	43 KB	JPG File
ad_pic11.jpg	12 KB	JPG File
ad_pic12.jpg	80 KB	JPG File
ad_pic13.jpg	43 KB	JPG File

Make sure to start from **ad\_pic9.jpg** to avoid overwriting existing screensaver images

- 4. Insert USB drive to device and navigate to USB Manager>Upload>Screen Savers.
- **5.** Select the images you wish to upload or upload all the pictures at once.




# ATTENDANCE SEARCH



## ATTENDANCE SEARCH



Go to menu and select Attendance Search and press OK.

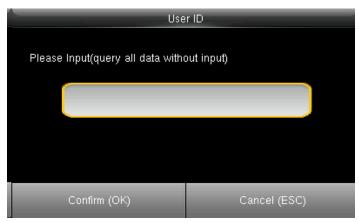


Enter the ID you want to view the data for in the input section by using the keypad and press OK.




Enter the User ID then press OK.



After you enter the ID it will give you options to view the attendance records for today or other weeks.

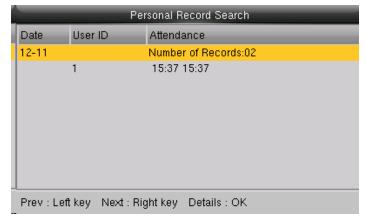

The records in accordance with the conditions will be displayed as above.

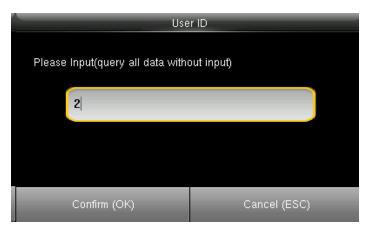

Enter the other ID you want to view for the attendance record.



# ATTENDANCE SEARCH




If the ID is not valid there will be no record and it will show as no enrolled data as shown above.







Go to Menu and select **Short Message** and press **OK**.

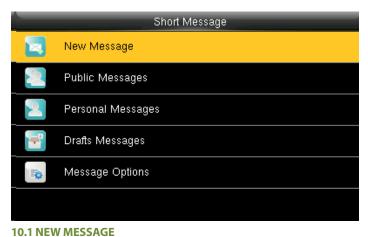


10.1 NEW MESSAGE


Click on New Message and press OK




Click on the Message option as shown above.

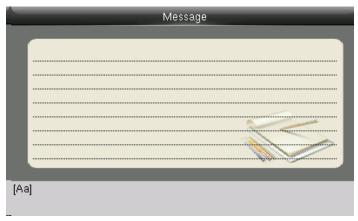

After you click on "Message" the above screen will appear in which you can type the message you wish to send with the help of the keypad.

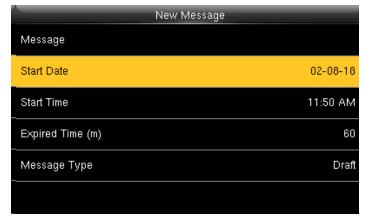


Click on **Start Date** and press **OK**.

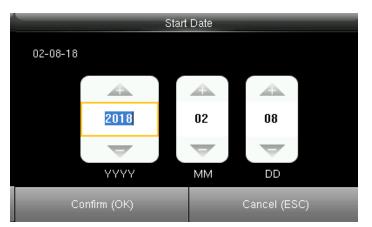


Here you can edit the date you wish the message to be displayed.



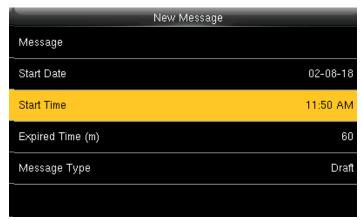

Click on **Start Time** and press **OK** 

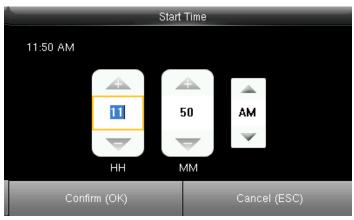

Here you can edit the "Start Time" to what time you want the message to be displayed.



Click on **Expired Time** and press "OK".




Here you can choose the time you want the message to be expired from the screen.

The "Expired Time" ranges in minutes.

New Messa,	ge
Message	
Start Date	02-08-18
Start Time	11:50 AM
Expired Time (m)	60
Message Type	Draft

Click on "Message Type" and press "OK".

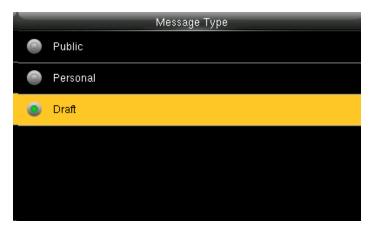


From the menu above you can select the "Message Type" you wish to display.






Go to Menu and select **Short Message** and press **OK**.

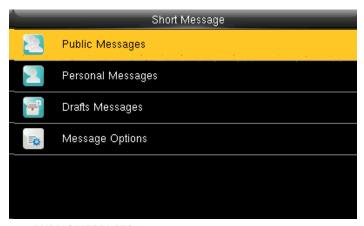


**10.2 PUBLIC MESSAGES** 

Select Public Message and press OK.

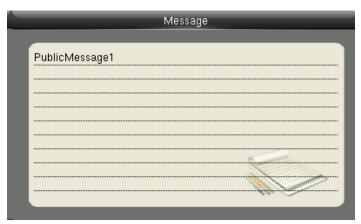


The message will be displayed on the screen as above.

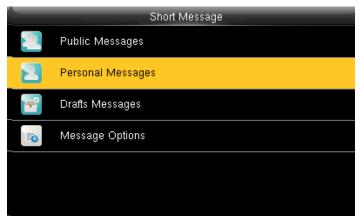


**10.3 PERSONAL MESSAGES** 

Here also if you want to view any Personal Message click on Personal Message and press OK.

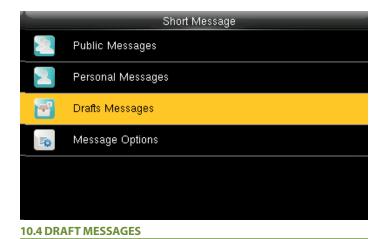


Select **Draft Messages** and press **OK**.

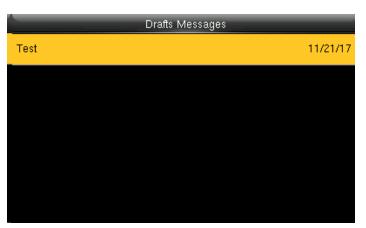


The draft messages will be displayed as above.



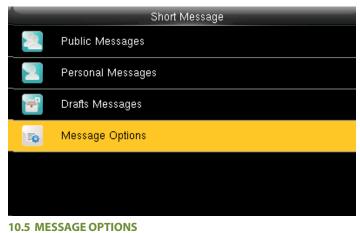

\_\_\_\_

Select Message Options and press OK

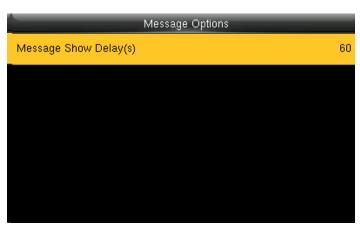

Press OK.



Select the **Time** and press **OK**.




WORK CODE



# **WORK CODE**



Go to menu and select Work Code and press OK.

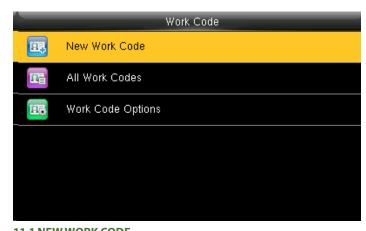

11.1 NEW WORK CODE


Select New Work Code and press OK



Select **ID** and Press **OK** 



Enter the user ID using keypad, press OK.

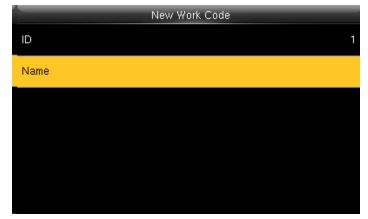

Select Name and press OK



Enter the name then press OK.




## WORK CODE




Select All work codes and press OK.



View All work codes.

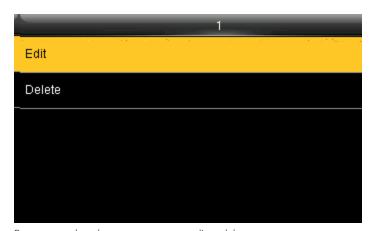


Press to select the one you want to edit or delete.

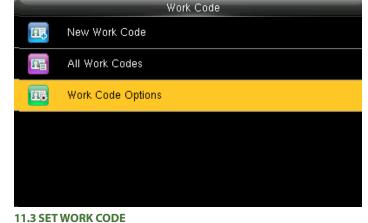

Select Work code options and press OK.

In edit you can edit the information and delete will delete the work code for that  $\ensuremath{\mathsf{ID}}.$ 

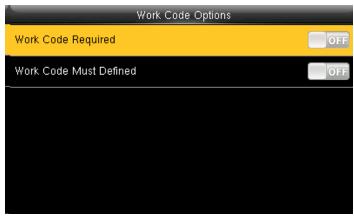


When the work code required is **OFF** it will disbale the required work code.



Select **ON** for workcode required.




# WORK CODE

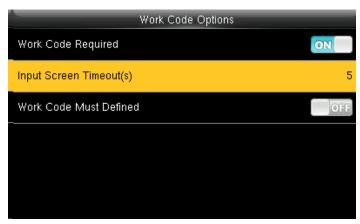


When you turn **ON** the workcode required it will ask you to set the timeout for the input screen.

Click on input screen timeout.

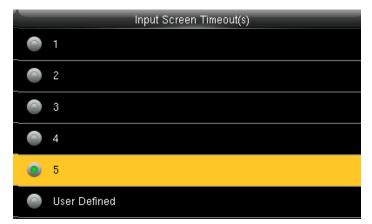

Here you can change the timeout for the input screen from the image above.

The timeout is in seconds.

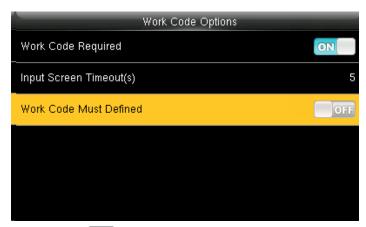

When you select **OFF** for the function above, the work code will not be defined and will be disabled.




When you select **ON**, the work code will be defined and it will enable that funtion.








Go to menu and select **Job code** icon.

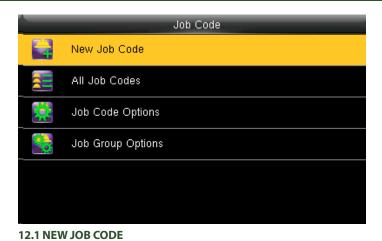

Select New Job Code

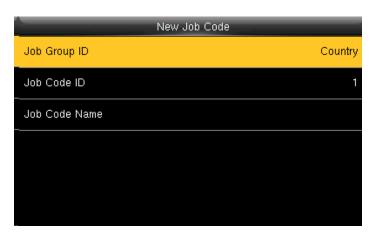

Select Job Group ID and then assign a particular job code from the category such as **Country** as shown above.



Select **Country** . The job group id will be selected as country.



Select Job Code ID




Enter Job Code ID or edit Job ID to represent the job code such as NO. 1 as shown above.






Select Job Code Name.

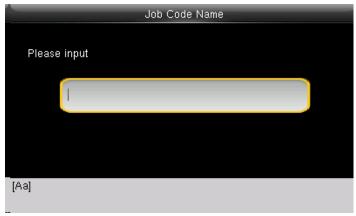

Input the Job Code Name in the box above. With the help of keypad you can input the name.



Enter the job code name **USA** as shown above

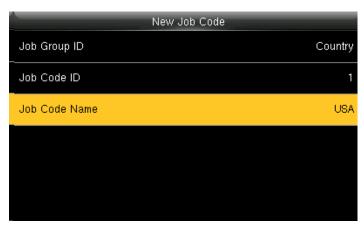

All input information you enter will be displayed on the screen as above. Press "ESC" button to go back to last menu and it will save all the information you entered



Go to menu and select Job Code



Select All JOB codes.





Select Country

	All Job Codes
1	USA
2	UK
3	Mexico
4	Canada

There is only one job code "USA assigned in to this group" Country 1



Select State

	All Job Codes
61	Greater Manchester
201	New Jersey
202	Washington
212	New York
312	Illinois
808	Hawaii

After selecting state, it will display all the job codes assigned to different states as shown above.

Select Greater Manchester as shown above to select the particular state

	Select Job Group
0	Country
0	State
0	City
	Block
0	Street
0	Zip

Select CITY

	All Job Codes
1	Honolulu
2	Chicago
3	Manchester
26	Mexico City
201	Jersey City
973	Piscataway

After selecting CITY all the job codes will be displayed according to the city as shown above and you can select whichever is applicable to you.





Select BLOCK

	All Job Codes
1	1st block
2	8th block
3	5th block
4	101 block

The different blocks will appear.

Select 1st block as shown above to select the particular block



Select Street

	All Job Codes
1	Market Street
2	West Main Street
3	East Street
4	Sepulveda Blvd
5	Bernardino Road

The different Streets will appear as shown above.

Select Market street as shown above to select the particular street

	Select Job Group
0	Country
0	State
0	City
	Block
0	Street
0	Zip

Select **ZIP** 

All Job	Codes
1	08854
2	08856
3	07097
4	07101
5	91740
6	90249


The different ZIP codes will appear as shown above.

Select ZIP Code 08854 as shown above to select the job code for that zip code.





Go to menu and select Job Code

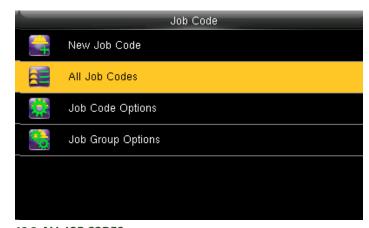

12.2 ALL JOB CODES

Select All Job codes .




Select Country



The job codes assigned to different countries will be displayed as shown above. Select 1 USA for the particular job code for that country.




After selecting 1 USA click on the Edit function.

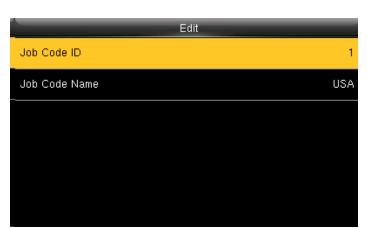

Click on the **Job code ID** if you want to edit the id number from 1 to a different number.



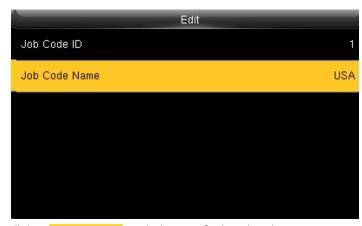

Click on Job Code Name to edit the name for that job code



Enter the Job code Name by using the keypad.



Change the name from "USA" to America



Click on confirmOK button to select America.




The job code name will change to America as shown above.







To delete the job codes in the particular group Go to menu and select Job Code.

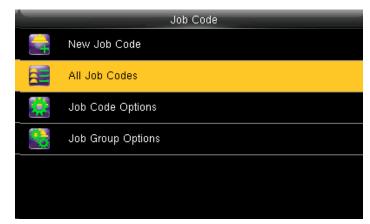

Select All Job Codes




Select **Country** as shown above



Select the job code you wish to delete.

Here select **USA**.

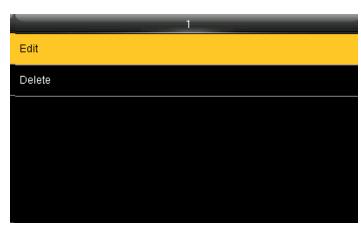

Click on the Edit function to change the name of the group.



When you select **Delete** it will delete the particular group you want to delete



When you press **Delete** the above screen will be displayed.

When you press **NO** to execute it will go back to last menu screen and nothing will be edited or deleted



When you press delete the above screen will be displayed.

When you press YES to execute it will execute the function and delete the particular job group you selected.




Group name USA is deleted and the other groups remain as shown above.



Job Code Options\_Menu\_Operation
Go to menu and select Job Code icon.



Job Code Options\_Menu\_Operation
Go to menu and select Job Code icon.

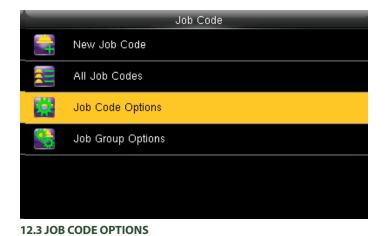

Select Job Code Options.




Turn ON the Job Code Required function to enable, and OFF to disable. Input Screen Timeout is used to set up the time period for displaying the job code list in seconds.

Switch Job Code Must Defined to force a job code to be selected before verification.




Select Input Screen Timeout as shown above.

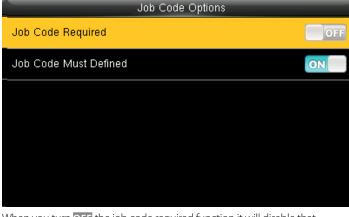


When you turn OFF the job code required function it will disable that function.


When you turn ON the job code must defined it will enable the function.

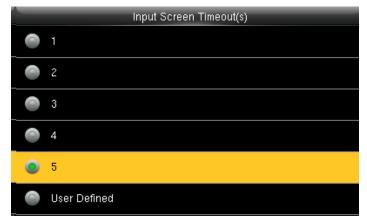

Select the time you want the screen to go idle. In this case 5 seconds is selected, when you select 5 seconds the screen will go to idle state if no registration or activity is performed on the clock.

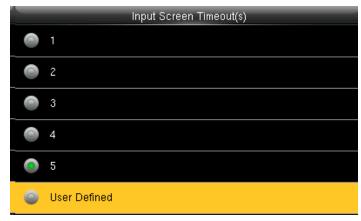


Select user defined function as shown above to set your own time for input screen timeout.

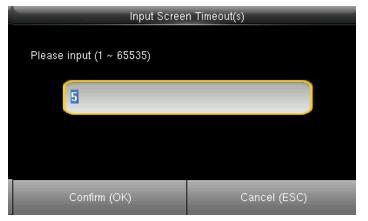


After selecting user defined function, the screen above will allow you to input the time.



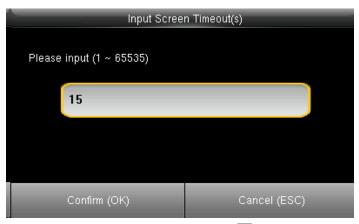

Here we put 15 seconds and then click on confirm  $\overline{\text{OK}}$  function to get that time selected.

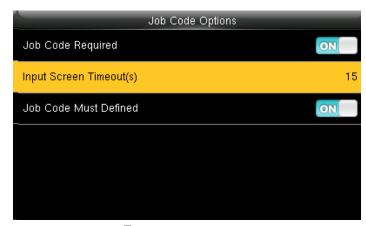


After pressing confirm  $O_{K}^{K}$  function the image will be displayed as above.



Turning ON Job Code Required will enable that function.

Switch "Job Code Must Defined" to ON to force a job code to be selected before verification


The input screen timeout for job code is selected as 15 seconds as shown above.

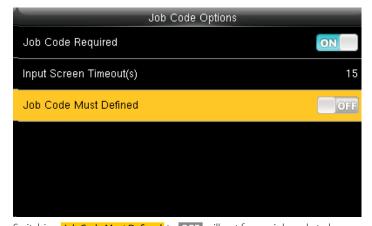

Switching Job Code Must Defined to OFF will not force a job code to be selected before verification



Go to menu and select Job code

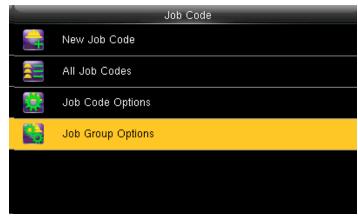

Select Job Group options.





Use ON or OFF to enable / disable the each individual Job Groups.



This screen will appear when you press the set job group name.



After you press confirm OK button the set group name will change from undefined 1 to Country as shown above.



The name of the group can be edited by selecting Set Job Group Name individually.

To set a Job Group Name click on set job group name as shown above.



To change the job group name to country as shown above we need to press\* key to switch the input method and type country using the keypad. After that press confirm ok button.



Similar way you can put the different job group name as shown above. Group1>> Country, group 2>> State Group3>> City.





Select the job group you want to enable by pressing the ON function. Other groups with OFF function selected will be disabled.

The job code functions will be active only to the group which is enabled  $\boxed{\mbox{ON}}$ 



To change the group name select Set Job Group name.



Change the current group name country by pressing\* key on the keypad of the clock



Change the group name to Nation as shown above.




The group name will be changed to Nation as shown above.







Go to menu and select Tip Code and press OK.

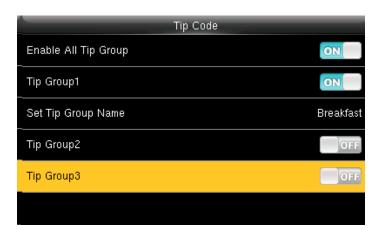

If you press ON it will enable that tip code function.

If you press OFF it will disable that tip code function

Here Tip group 1 is enabled and Tip Groups 2 and 3 are disabled.



To set the tip group name select Set Tip Group Name.




**13.1 TIP CODE SETTINGS** 

Switch Enable All Tip Group to ON to enable Tip Code function; OFF to disable Tip Code function.

The groups can be turned on/off individually using **ON** or **OFF** associated with each tip group



If you switch **ON** to enable all tip group it will disable all the tip group and no tip groups will be shown as above.

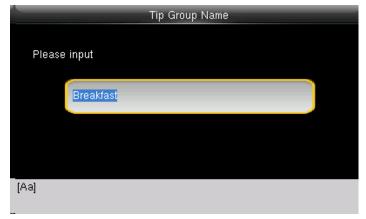

When you select the set tip group name the following image will be displayed and you can edit the name of the group from breakfast to other name by pressing\* key on the keypad and # key for space





Here the Tip group is being changed from breakfast to Dinner with the keypad on the clock.



After you change the name press Confirm OK



Once you hit the Confirm OK button the set tip group name will be changed to Dinner as shown above.



13.2 TIP CODE

Go to menu and select "Personalize" and press OK



Select Shortcut key mappings and press OK.



Select F3 as tip code.






In F3 Select Punch State Value.




You can change the punch state value by editing in the input section using the keypad.




Select Function

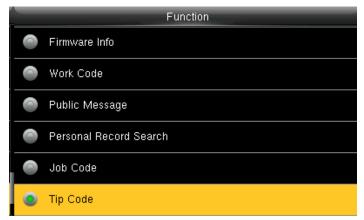

In function key select TIP code.

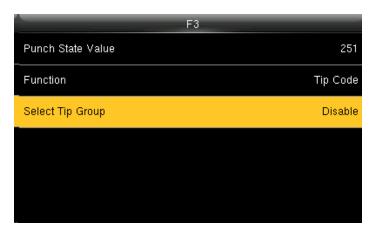


Here you can enable or disable **Select Tip Group** function.

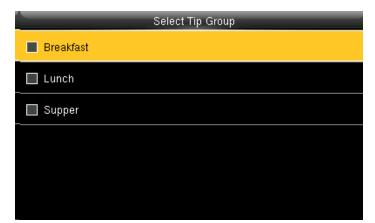


If the check mark is not selected on the box no tip group will be selected and it will be disabled as above



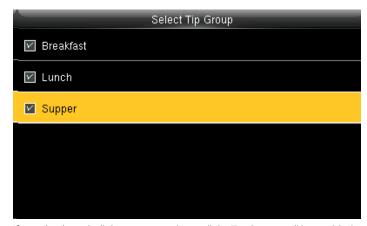


If you check mark all the groups as above all the Tip Groups will be enabled.

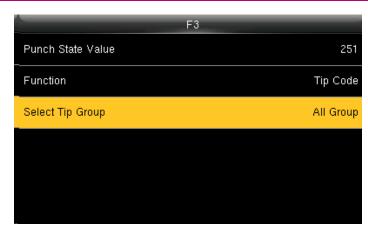

If all three tips are selected, Select Tip Group will be displayed as All Group.




Select F3 key on the main screen as tip code.

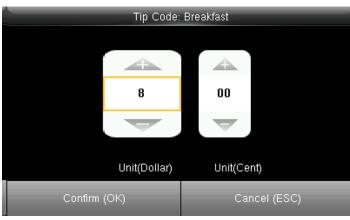


You can edit the tip in the amount of dollars by pressing up and down arrow on the keypad according to group.

Here for breakfast tip is set to 8 dollars and then press confirm OK.

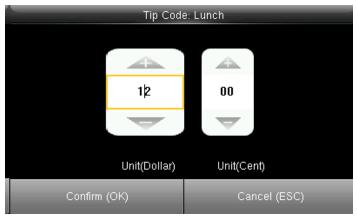


You can edit the tip in the amount of dollars by pressing up and down arrow on the keypad according to group.

Here for Lunch tip is set to 12 dollars and then press confirm OK.

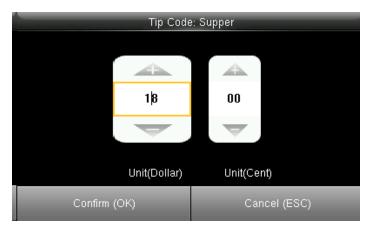

You can edit the tip in the amount of dollars by pressing up and down arrow on the keypad according to group.

Here for Supper tip is set to 18 dollars and then press confirm OK.

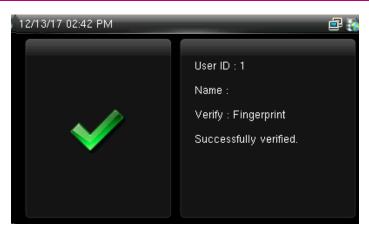

Once all the tips are set according to the group the user from the group can easily punch in and punch out by their fingerprint and the above image will be displayed if the fingerprint is successfully verified.









Go to menu and select "Auto test" and press OK.



The terminal automatically tests the display effect of the color TFT display by displaying full color, pure white and pure black and checks whether the screen displays properly.

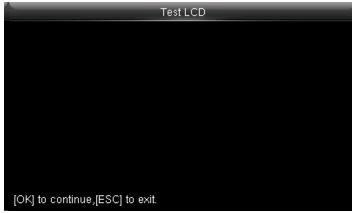


The terminal automatically tests the display effect of the color TFT display by pure black

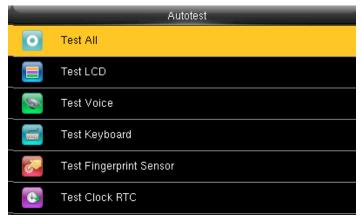


14.1 ALL TEST

Select Test All.

The terminal automatically tests the LCD, voice, sensor, keyboard and clock, press [OK] to continue and press [ESC] to exit

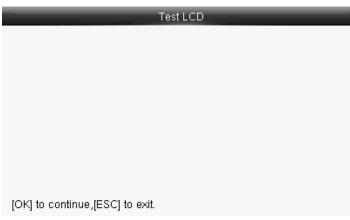


You can continue the test by touching the screen or exit it by pressing [ESC]

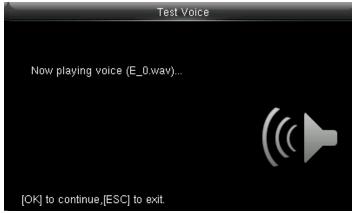


Here you can test the different voice wav file. To continue the voice test press  $\overline{OK}$  and to exit press ESC




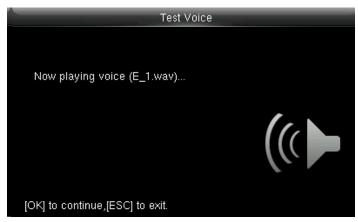


Here you can test the different voice wav file. To continue the voice test press OK and to exit press ESC

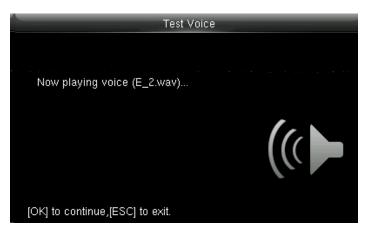


Here you can test the different voice wav file. To continue the voice test press  $\overline{\rm OK}$  and to exit press ESC

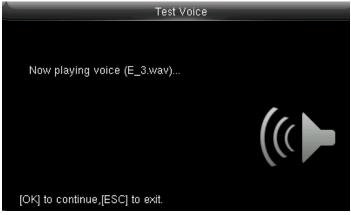


Here you can test the different voice wav file. To continue the voice test press  $\overline{\rm OK}$  and to exit press ESC

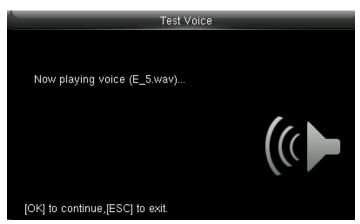


Here you can test the different voice wav file. To continue the voice test press  $\overline{\rm OK}$  and to exit press ESC

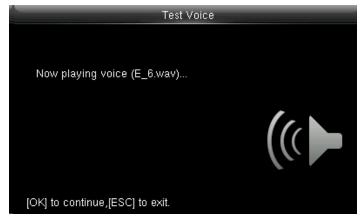

Here you can test the different voice wav file. To continue the voice test press OK and to exit press ESC

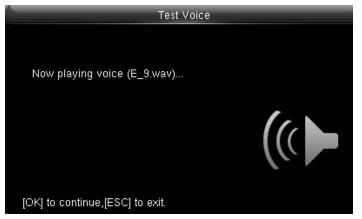


Here you can test the different voice wav file. To continue the voice test press  $\overline{\rm OK}$  and to exit press ESC

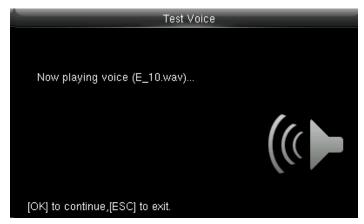


#### **14.3 TEST VOICE**

Here you can test the different voice wav file. To continue the voice test press  $\overline{OK}$  and to exit press ESC

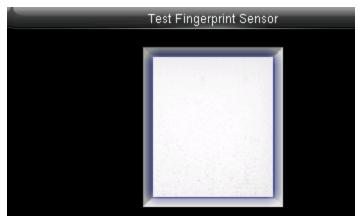


#### 14.5 TEST FINGERPRINT SENSOR

The terminal automatically tests whether the fingerprint collector works properly by checking whether the fingerprint images are clear and acceptable. When the user places his/her finger in the fingered guide, the collected fingerprint image is displayed on the screen in real-time. Press [ESC] to exit the test

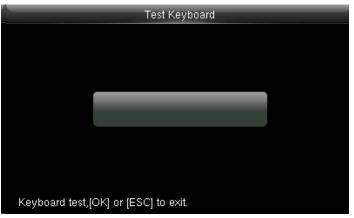

#### **14.4 TEST KEYBOARD**

The terminal tests whether every key on the keyboard works normally. Press any key on the [Keyboard Test] interface to check whether the pressed key matches the key displayed on screen. The keys are dark-gray before pressed, and turn blue after pressed. Press [ESC] to exit the test.

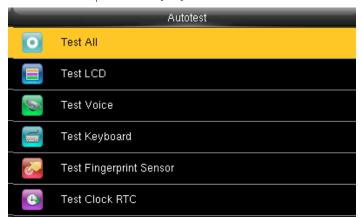

#### 14.6 TEST CLOCK RTC

Test Clock RTC: The terminal tests whether its clock works properly by checking the stopwatch of the clock. Touch the screen to start counting, and touch it again to stop to check whether the counting is accurate. Press [ESC] to exit the test.




# SYSTEM INFORMATION




## SYSTEM INFORMATION



Go to menu and select System Info and press OK.

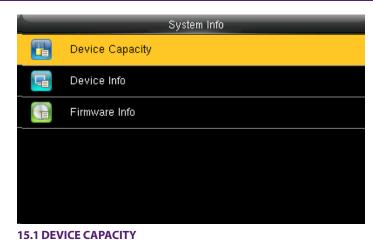

Select Device Capacity

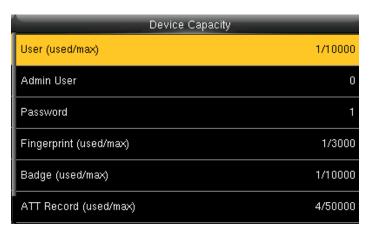


The number of enrolled users, administrators, passwords, the total fingerprint storage capacity and occupied capacity, ID cards and attendance capacity are displayed respectively

Device Capacity	
Admin User	0
Password	1
Fingerprint (used/max)	1/3000
Badge (used/max)	1/10000
ATT Record (used/max)	4/50000
User Photo(used/max)	0/2000

The number of enrolled users, administrators, passwords, the total fingerprint storage capacity and occupied capacity, ID cards and attendance capacity are displayed respectively



Click on "Device info" and press OK.

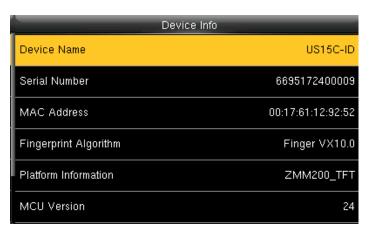


The Device name, serial number, MAC Address, Fingerprint Algorithm, platform information and MCU version are displayed on device interface.



# SYSTEM INFORMATION

Device	e Info
MAC Address	00:17:61:12:92:52
Fingerprint Algorithm	Finger VX10.0
Platform Information	ZMM200_TFT
MCU Version	24
Manufacturer	ZK Tech
Manufacture Date	07/31/2017 01:09:15

Manufacturer and Manufacture date are displayed on the device interface

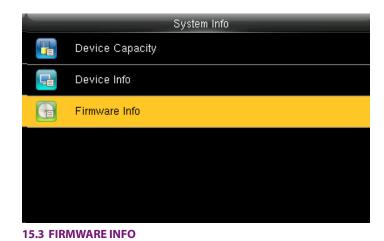

Click on Firmware Info and press OK.

	Firmware Info
Firmware Version	Ver 8.0
Bio Service	Ver 2.1.12-2
Push Service	Ver 2.0.24S-2
Standalone Service	Ver 2.1.0-2
Dev Service	Ver 1.0.101-2

The Firmware version, Bio Service, Push Service, Standalone Service, Dev Service and System Version are displayed on the firmware info interface

